

# Operation of Your EDSR 100

## Digital Video Recorder

1. To record simply press the REC button on the recorder
2. To playback hit STOP and the SEARCH on the recorder
3. Press and **hold** the VCR button on the ATV until you see SEARCH BY SEGMENT, ALARM SEARCH, and BY DATE TIME and then release the button
4. Use the arrow keys on the recorder to arrow down to BY DATE TIME and press ENTER
5. Use the left and right arrow keys to move back and forth between YEAR, MONTH, DAY and HOURS, MINUTES, SECONDS (24 hour time) and use the up and down arrows to get the desired time and date you wish to play back and press ENTER
6. Use the corresponding camera keys to switch back and forth between different cameras
7. Use the outside shuttle dial on the recorder to fast forward or rewind
8. If you see something fishy, hit pause on the recorder and turn the inside jog dial to move it ahead or backwards in slow motion.
9. When finished viewing playback, hit STOP on the recorder and then hit REC to resume recording. Then hit the VCR button on the ATV until you get back to the live viewing mode
10. Be sure that the H.D.D. light on the recorder is blinking to ensure that you are recording