

# **Operation of Your EDSR 100 Digital Video Recorder**

1. Hit VCR button on DPX 9m
2. Hit STOP on recorder
3. Hit SEARCH on recorder
4. Arrow down to BY DATE TIME and press ENTER on the recorder
5. Use the left / right arrows on the recorder to toggle back and forth between year / month / day and hours / minutes / seconds (military time) and use the up and down arrows to change their value
6. When you have the desired date and time you wish to view in playback press ENTER on the recorder
7. Switch back and forth to different cameras by pressing the corresponding camera button on the DPX 9m
8. Turn the outside shuttle dial on the recorder to fast forward or rewind on the recorder
9. If you see something fishy hit PAUSE on the recorder and turn the inside jog dial on the recorder to move it ahead in slow motion
10. When finished with viewing playback, press STOP on the recorder and then press REC on the recorder
11. Press VCR on the DPX 9m to get back to live viewing on your monitor
12. Make sure that the REC button on the recorder is lit up to ensure that you have resumed recording
13. Repeat this process for every time you want to play something back