

Burning an Event to CD

Creating a Pre-Formatted CD

Click the minimize button located in the lower right hand corner. This will take you to the standard windows desktop.



Click the arrow in the lower right hand corner to display all of the hidden icons.



Double click on the CD.




This should bring up the following (or similar) application.




Find the Player.exe file and drag it to the CD, this will copy that file to the CD.


(The Player.exe file will either be located on the desktop or in the C:\Program Files\Cam SS XP\ directory)

When this process is completed the "CD" on the Roxio application will stop spinning. Click the  button. The CD will eject, you now have a formatted Cam SS CD.

Using a pre-formatted Cam SS CD: Call 262-369-8797 if you wish to purchase Cam SS pre-formatted CDs.


An incident has occurred and you now need to get the video into the hands of the proper personnel. How do I do this? Simply follow the instructions below:


Click  the play button. This will display the following search bar:

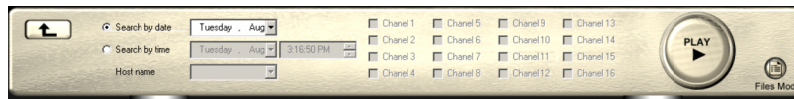


Select search by time, set a date and time relative to the start of the incident, then press the **Play** button. This will launch the player as illustrated in the picture below:




Once you have located the start of the incident you can create a clip of that incident. To do this click the  button. This will bring up a subset of controls as shown below:

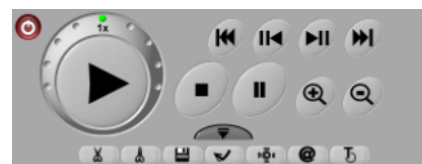


To start the clip press the  button. This will create a tick mark on the scroll bar identifying where the clip has started.



To end the clip press the  button. This will create a tick mark where the video clip ends.




Once this is done you can save the clip by pressing the  button. This saves the video clip under the same date folder as the original file under a directory called Clip.

To review the clip you just created press the  button. You can then close the player application.


Then click the files mode button.




This will bring up the Files Mode playback view.

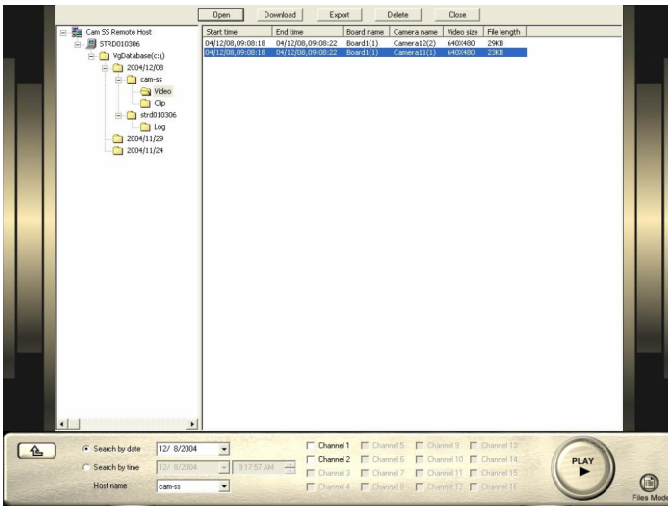

From here you should click on the + next to Cam SS Host, then click on the + next to the video folder, then the desired date. Next select the Video, Clip, or Picture folder, then click on the file once to highlight it. When the desired file(s) is highlighted click the export button. This will bring up the following menu:

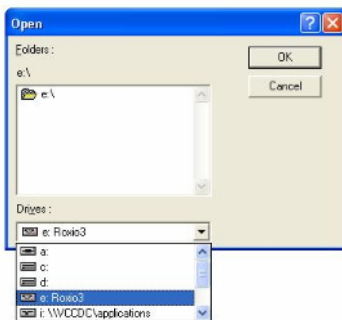

Use the drop-down menu to select the CD, then click OK.

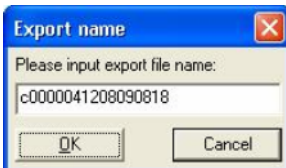

Click Ok again to use the default name.

Then click the eject button on the CD Drive, wait 1-3 minutes when the CD ejects the copy process is complete.